
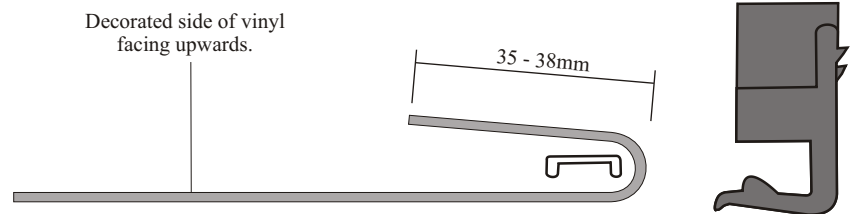
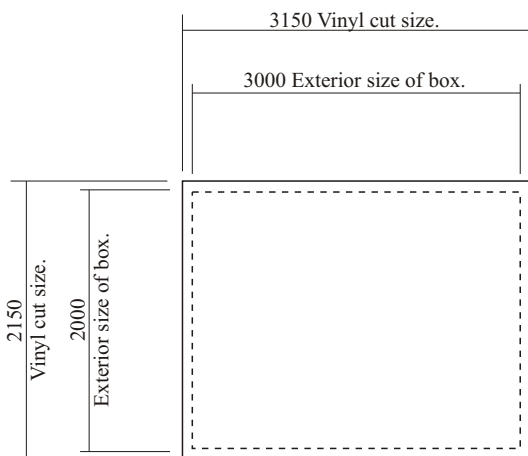


**Econoflex #7010 Flat top (199mm)
With 2121 cover**

Assembled frame and vinyl sizes.

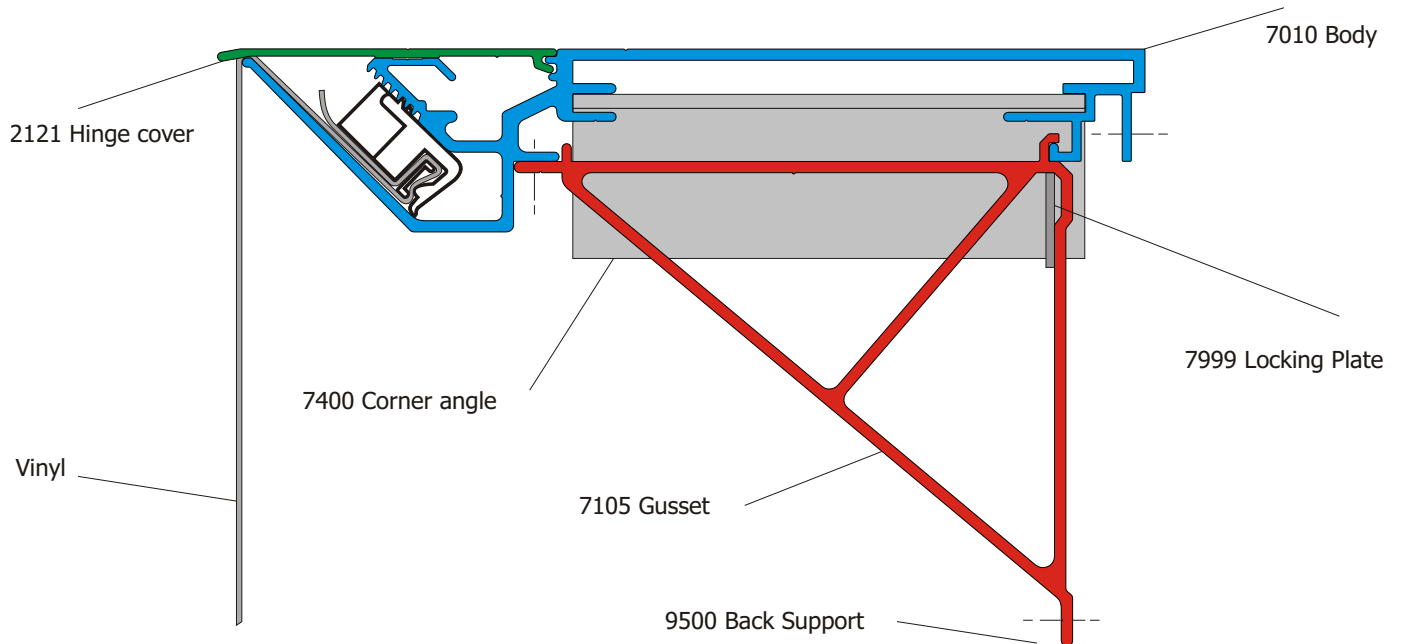

Vinyl cutting sizes

Add 150mm to the height and width (75mm on each side) of the finished size of the frame #7000
ie. For a frame that has overall measurements of 3000 x 2000mm,
the vinyl should measure 3150 x 2150mm.